CONTROL PANEL PARTS

For Model: SF387PEYQ4
(Designer White)

30" GAS
FREESTANDING RANGE
ELECTRONIC IGNITION
SELF− CLEAN OVEN SEALED BURNER

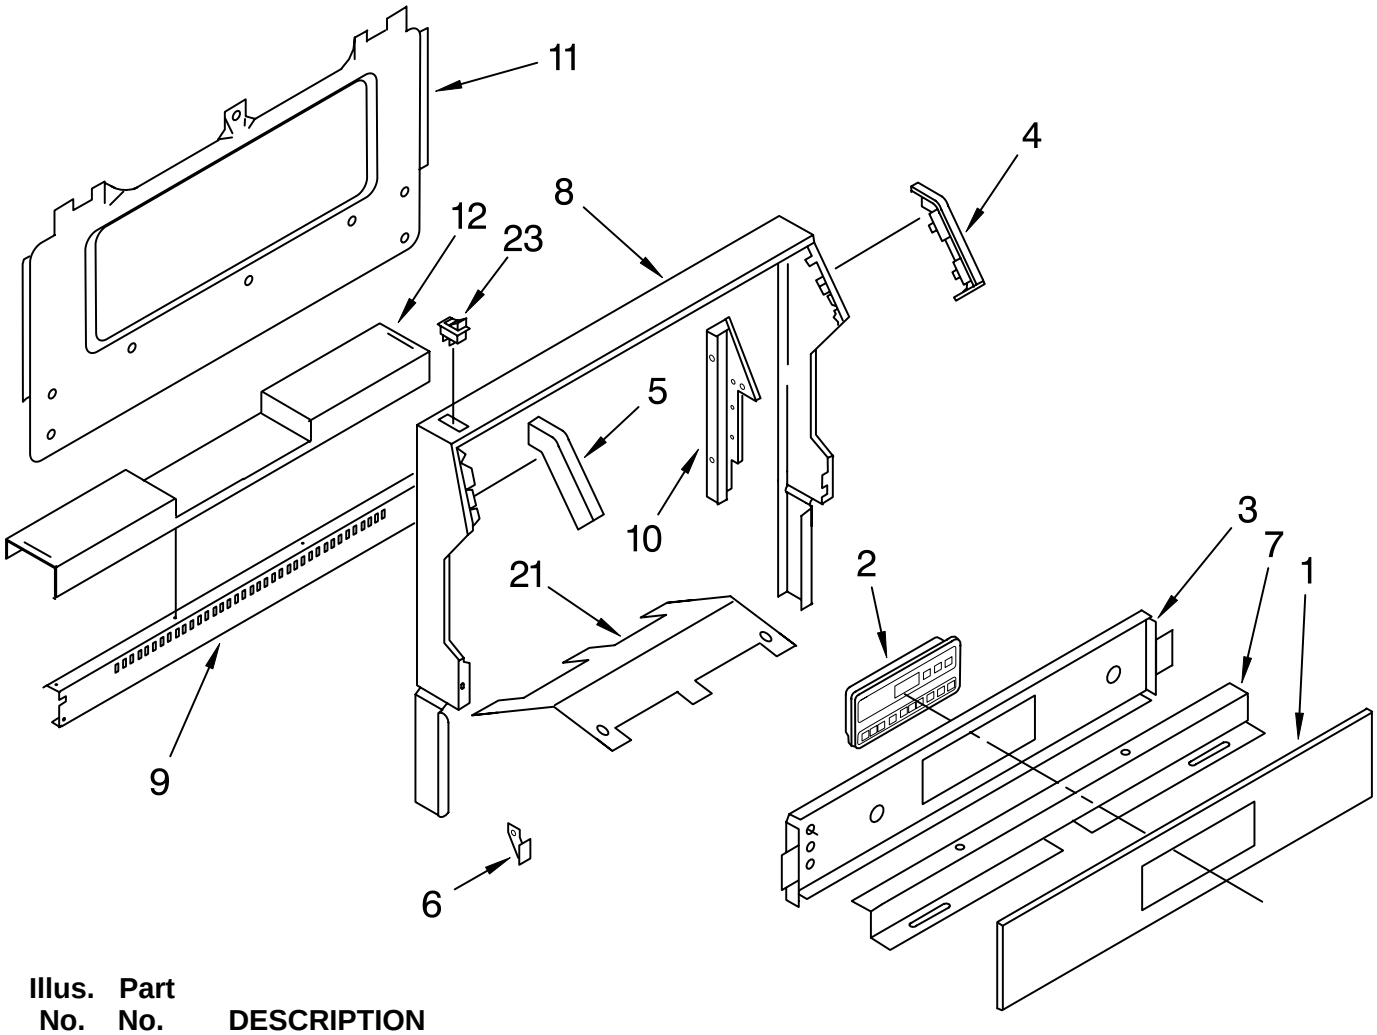

Illus. No.	Part No.	DESCRIPTION
1	4372088	Panel, Control
2	4371841	Control, Electronic Timer
3	4371834	Bracket, Timer
4	4371316	Endcap, RH
5	4371317	Endcap, LH
6	4371563	Cap, Filler (2)
7	4371836	Retainer, Timer
8	4371561	Trim, Wrapper
9	4371562	Trim, Deflector
10		Support,Backguard
	4372307	R.H.
	4372308	L.H.
11	4371300	Shield, Rear Wall
12	4371537	Deflector, Flue
21	4371655	Shield,Inner Bkgd
23	4371572	Switch, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Model: SF387PEYQ4
(Designer White)

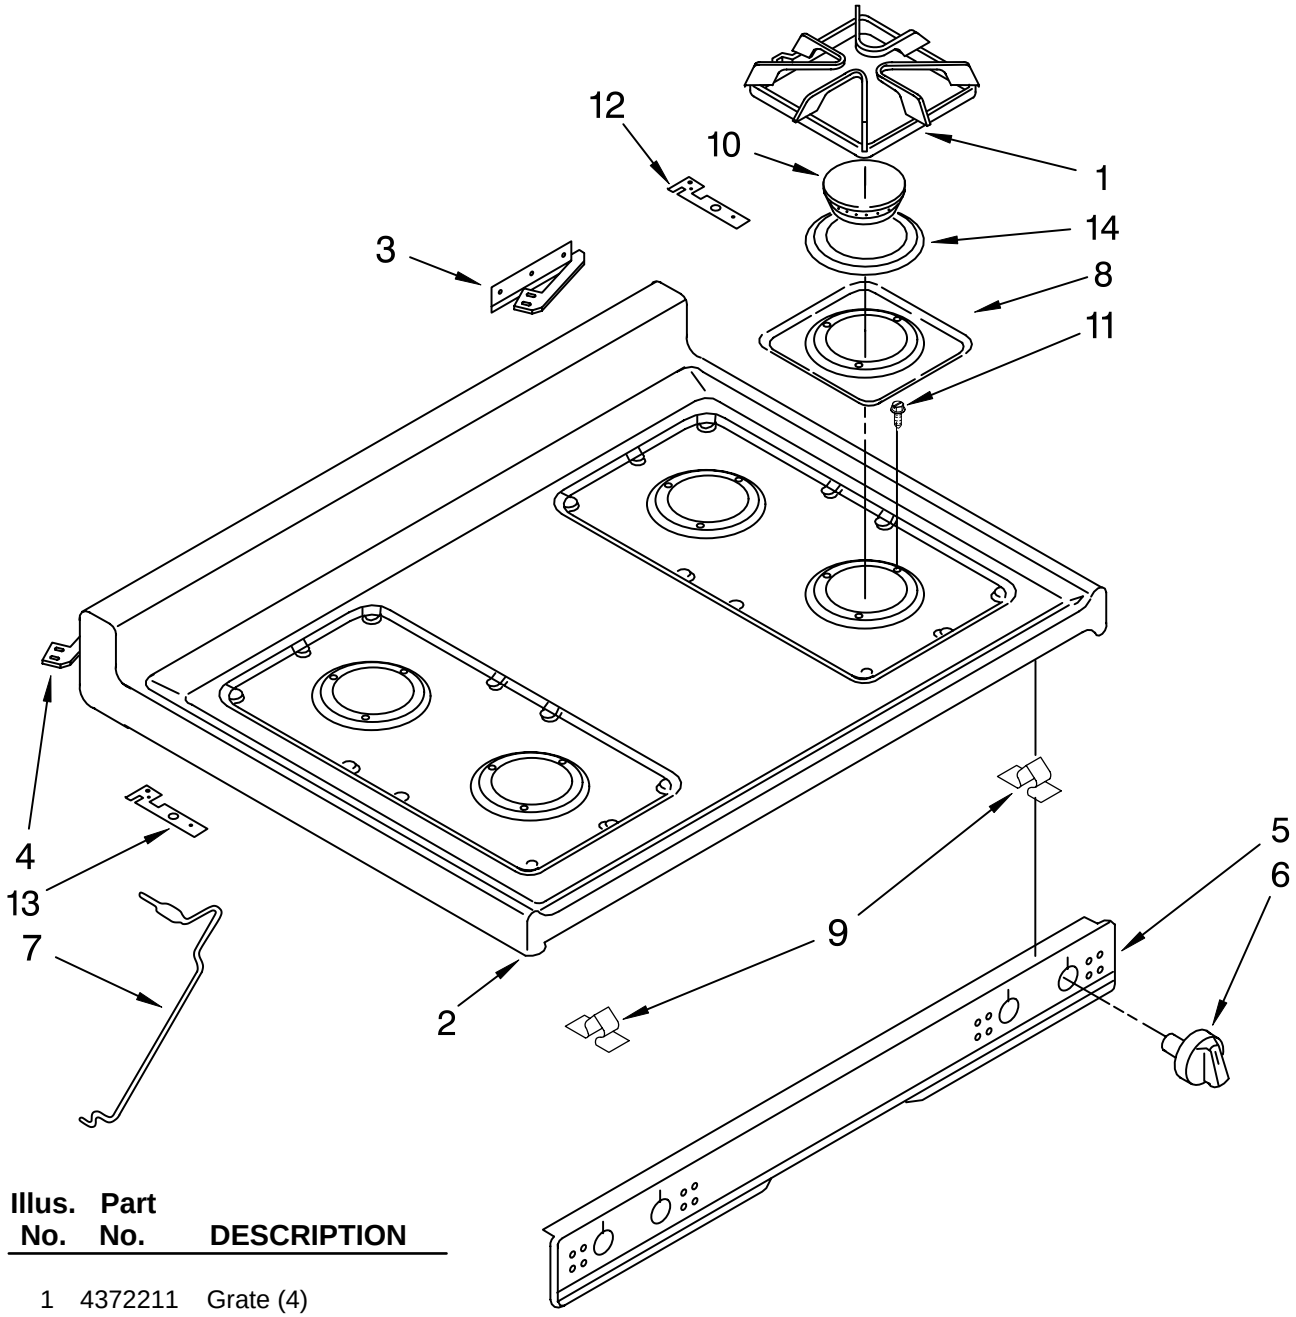

Illus. No.	Part No.	DESCRIPTION
1	4372211	Grate (4)
2	4372276	Top, Main
3	4371545	Bracket, Hinge RH
4	4371546	Bracket, Hinge LH
5	4371707	Panel, Manifold
6	4371685	Knob, Control (4)
7	4371541	Rod, Support Top
8	4371710	Pan, Burner (4)
9	816612	Clip, Spring (2)
10	4371874	Cap, Burner
11	4371589	Screw, Burner Mtg (12)
12	4371591	Bracket, Mtg RH
13	4371592	Bracket, Mtg LH
14	4371873	Ring, Trim (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP BURNER PARTS

For Model: SF387PEYQ4
(Designer White)

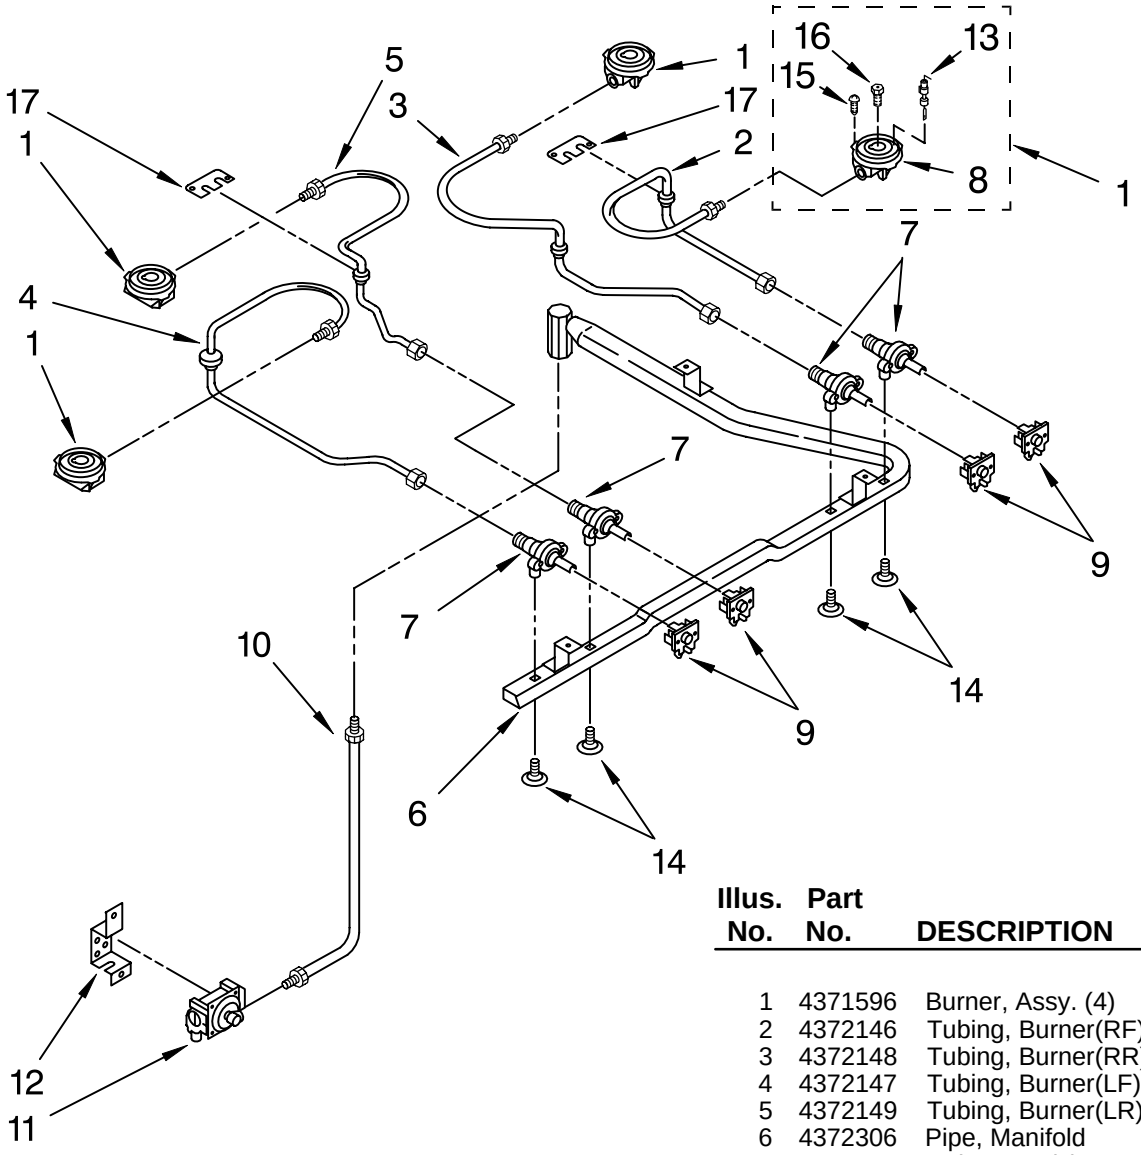

Illus. No.	Part No.	DESCRIPTION
1	4371596	Burner, Assy. (4)
2	4372146	Tubing, Burner(RF)
3	4372148	Tubing, Burner(RR)
4	4372147	Tubing, Burner(LF)
5	4372149	Tubing, Burner(LR)
6	4372306	Pipe, Manifold
7	4371587	Valve, Top(4)
8	4371597	Head, Burner
9	4371164	Switch, Ignitor(4)
10	4372316	Tubing, Regulator To Manifold Pipe
11	4372040	Regulator,Pressure
12	816636	Bracket, Regulator
13	4371598	Bracket & Electrode
14	4371027	Screw, Valve Mtg.
15	4371599	Screw, Electrode
16	816567	Orifice
17	816602	Plate,Burner Tube

OPTIONAL PARTS NOT INCLUDED

4372091	Gas Conversion Kit (Natural Gas To LP Gas)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BROILER & OVEN BURNER PARTS

For Model: SF387PEYQ4
(Designer White)

Illus. No.	Part No.	DESCRIPTION
1	816582	Baffle, Broiler Burner
2	816584	Baffle, Oven Burner
3	816722	Burner, Broiler
4	816588	Burner, Oven
5	816624	Ignitor, Broiler Burner
6	816625	Ignitor, Oven Burner
7	4371583	Ignitor, Module
8	816594	Mixer, Elbow
9	4372314	Tubing, Valve To Mixing Elbow
10	816692	Valve, Safety
11	4372315	Tubing, Valve To Regulator
12	816642	Nut, Hex (2)

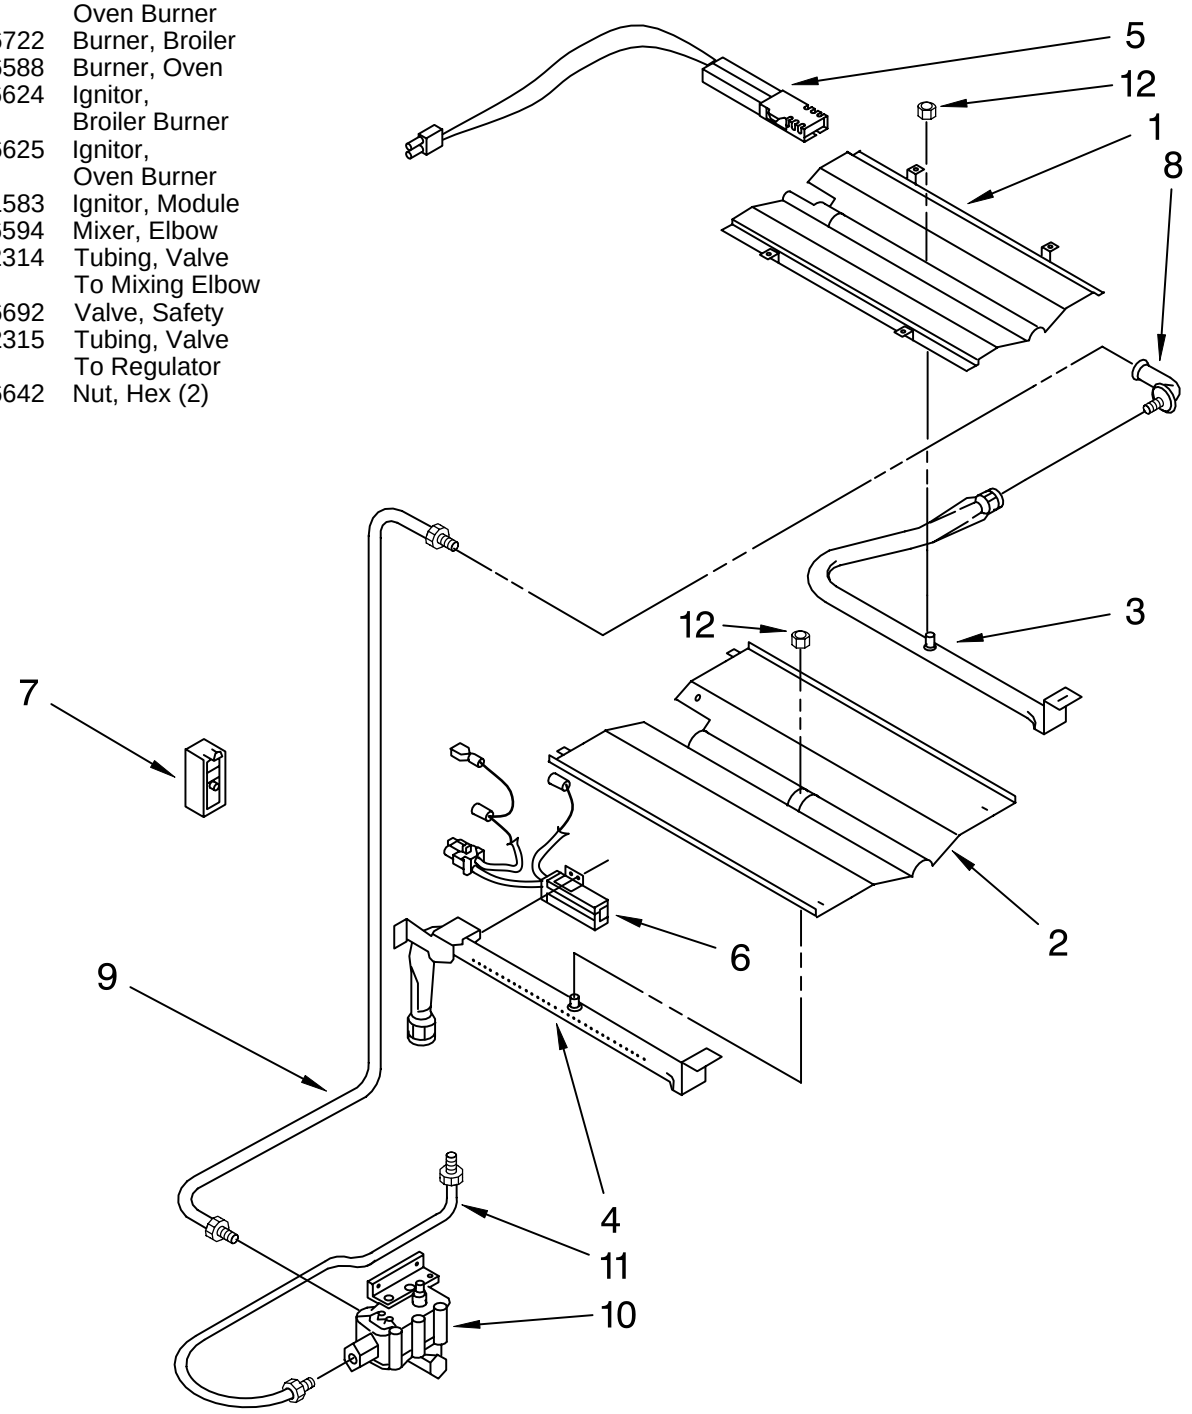

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: SF387PEYQ4

(Designer White)

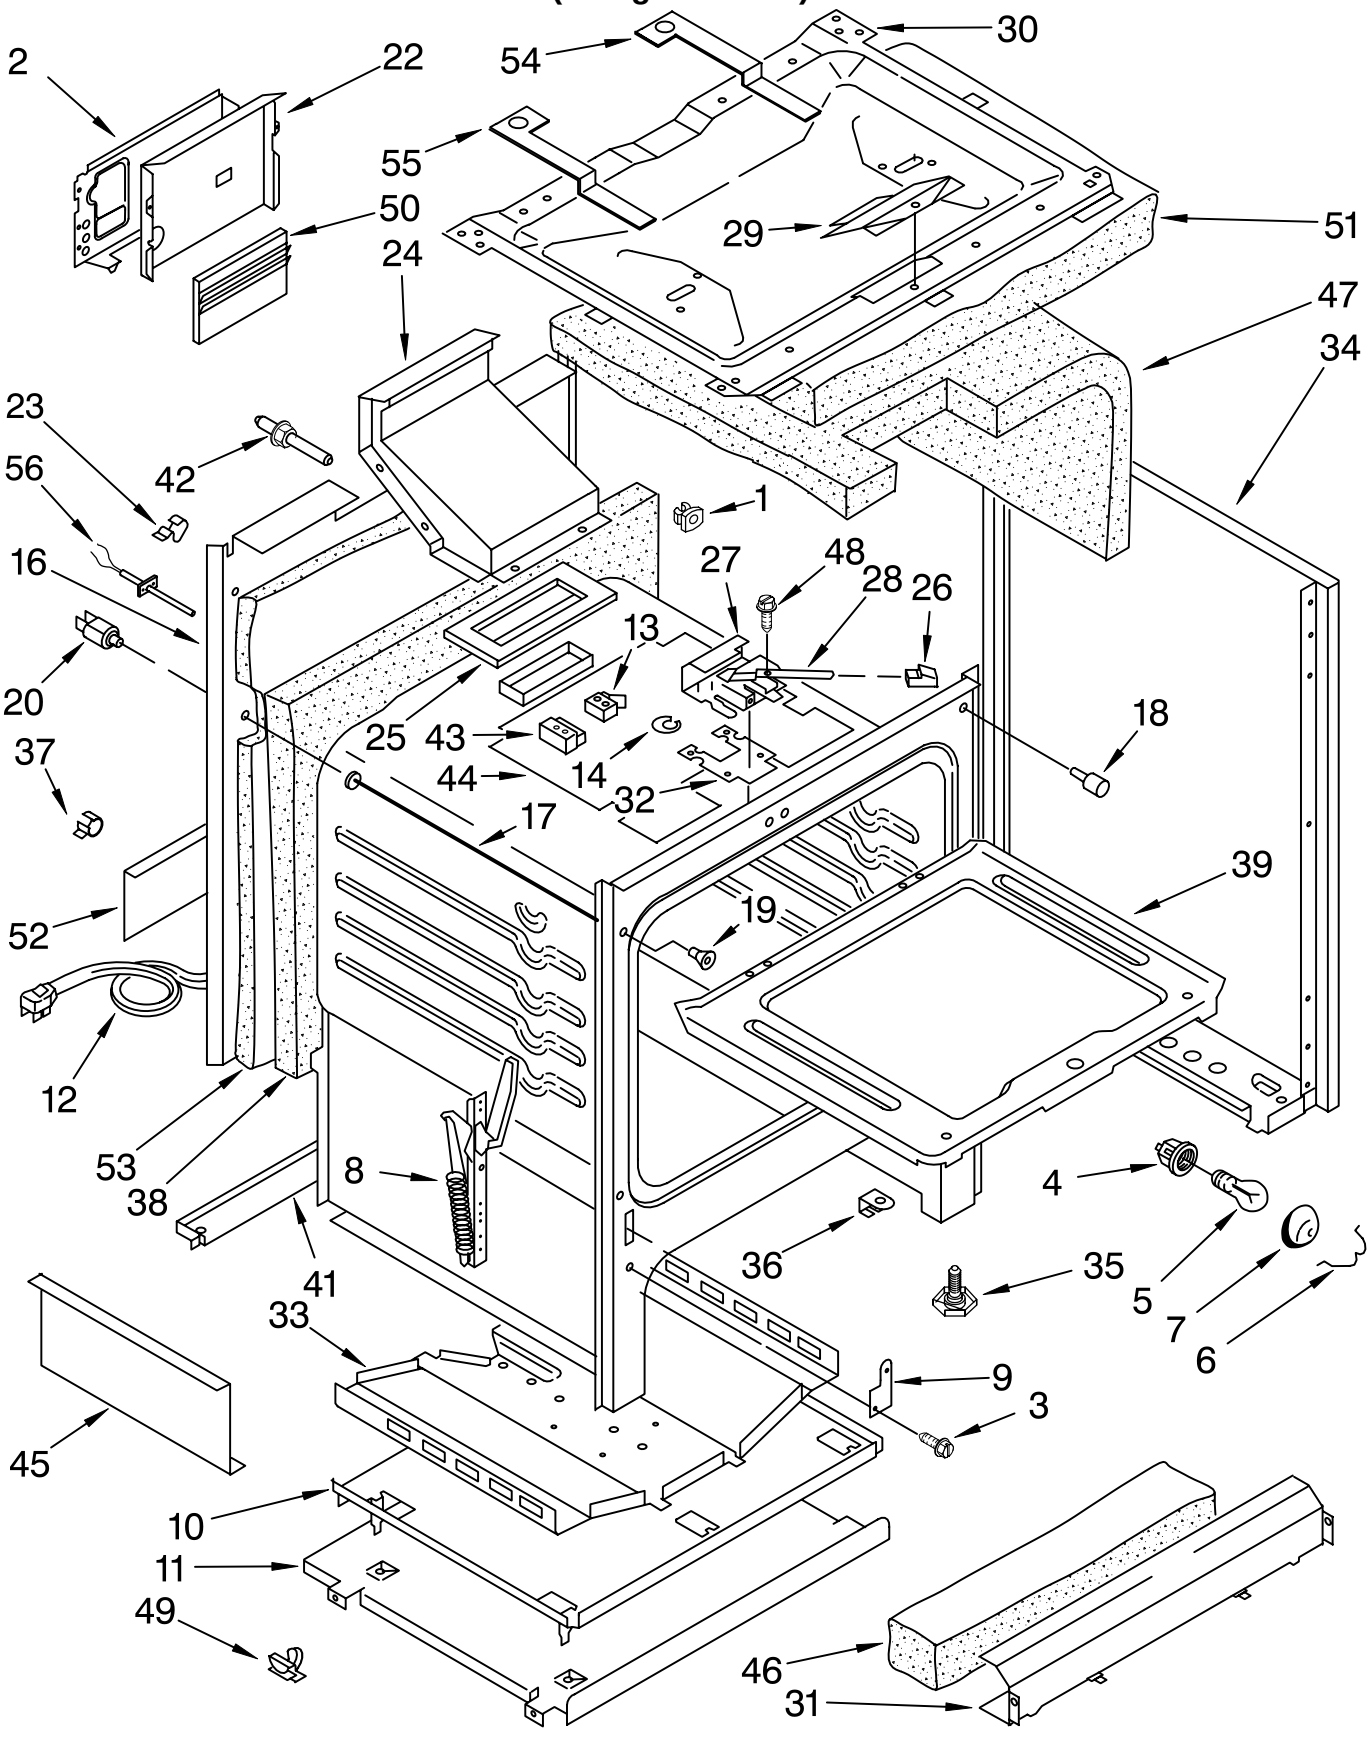

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: SF387PEYQ4
(Designer White)

Illus. No.	Part No.	DESCRIPTION
1	816669	Spacer, Body (8)
2	4371619	Shield, Rear Wall
3	816651	Screw, Oven Bottom
4	816668	Socket, Oven Lamp
5	4371303	Bulb, Oven Light
6	4371621	Retainer, Lens
7	816609	Lens, Oven Light
8	4371143	Hinge, Oven Door
9	816617	Cover, Hinge
10	4371042	Shield, Heat (Upper)
11	816657	Shield, Heat (Lower)
12	816614	Cord, Power
13	4372101	Switch, Latch
14	816633	Fastener, Push−On
16	4372290	Back, Main
17	4372288	Rod, Light Switch
18	816608	Bumper, Front (4)
19	4371682	Cover, Rod End
20	4372289	Switch, Door
22	4371661	Shield, Rear Heat
23	816577	Clip, Wire
24	4371652	Flue Box
25	816620	Gasket, Flue
26	4371680	Knob, Latch
27	4371036	Latch, Door
28	4371151	Handle, Latch
29	816615	Cover, Plate
30	4372310	Burner Box
31	816776	Shield, Main Front
32	816638	Shield, Latch
33	816660	Shield, Heat Baffle
34		Panel, Side
	816709	Left Side
	816708	Right Side
35	4371909	Screw, Leveler (4)
36	4372313	Support, Oven Bottom
37	816618	Fastener, Cord
38	4372312	Insulation, Oven Back
39	4372245	Bottom, Oven
41	816585	Bracket, Anti Tip
42	816639	Spacer, Stud (2)
43	816637	Shield, Latch
44	816658	Shield, Oven Top
45	816648	Shield, Side(2)
46	816627	Insulation, Front
47	816629	Insulation, Oven Wrapper
48	4371664	Screw, Latch
49	816621	Glide, Drawer
50	4371662	Shield, Flue
51	816628	Insulation, Ov Top
52	816663	Shield, Wire
53	816664	Shield, Wool
54	4371527	Bracket,Maintop RH
55	4371528	Bracket,Maintop LH
56	816645	Probe, Oven Temp.

OVEN RACK PARTS

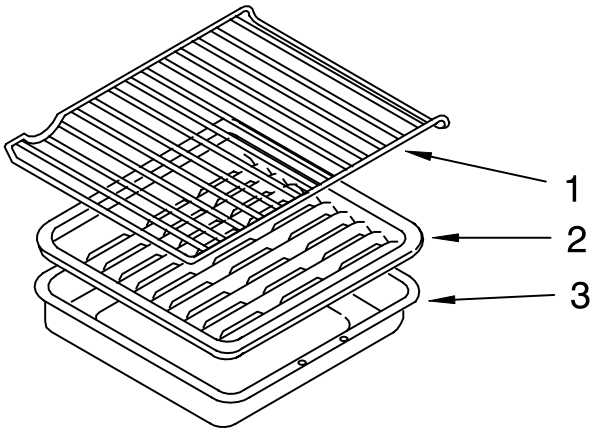

Illus. No.	Part No.	DESCRIPTION
1	4371483	Rack, Oven (2)
2	816626	Insert, Broiler Pan
3	816644	Pan, Broiler

LITERATURE PARTS

LIT4372206	Use & Care Guide
LIT4372196	Installation Instructions

DOOR AND DRAWER PARTS

For Model: SF387PEYQ4
(Designer White)

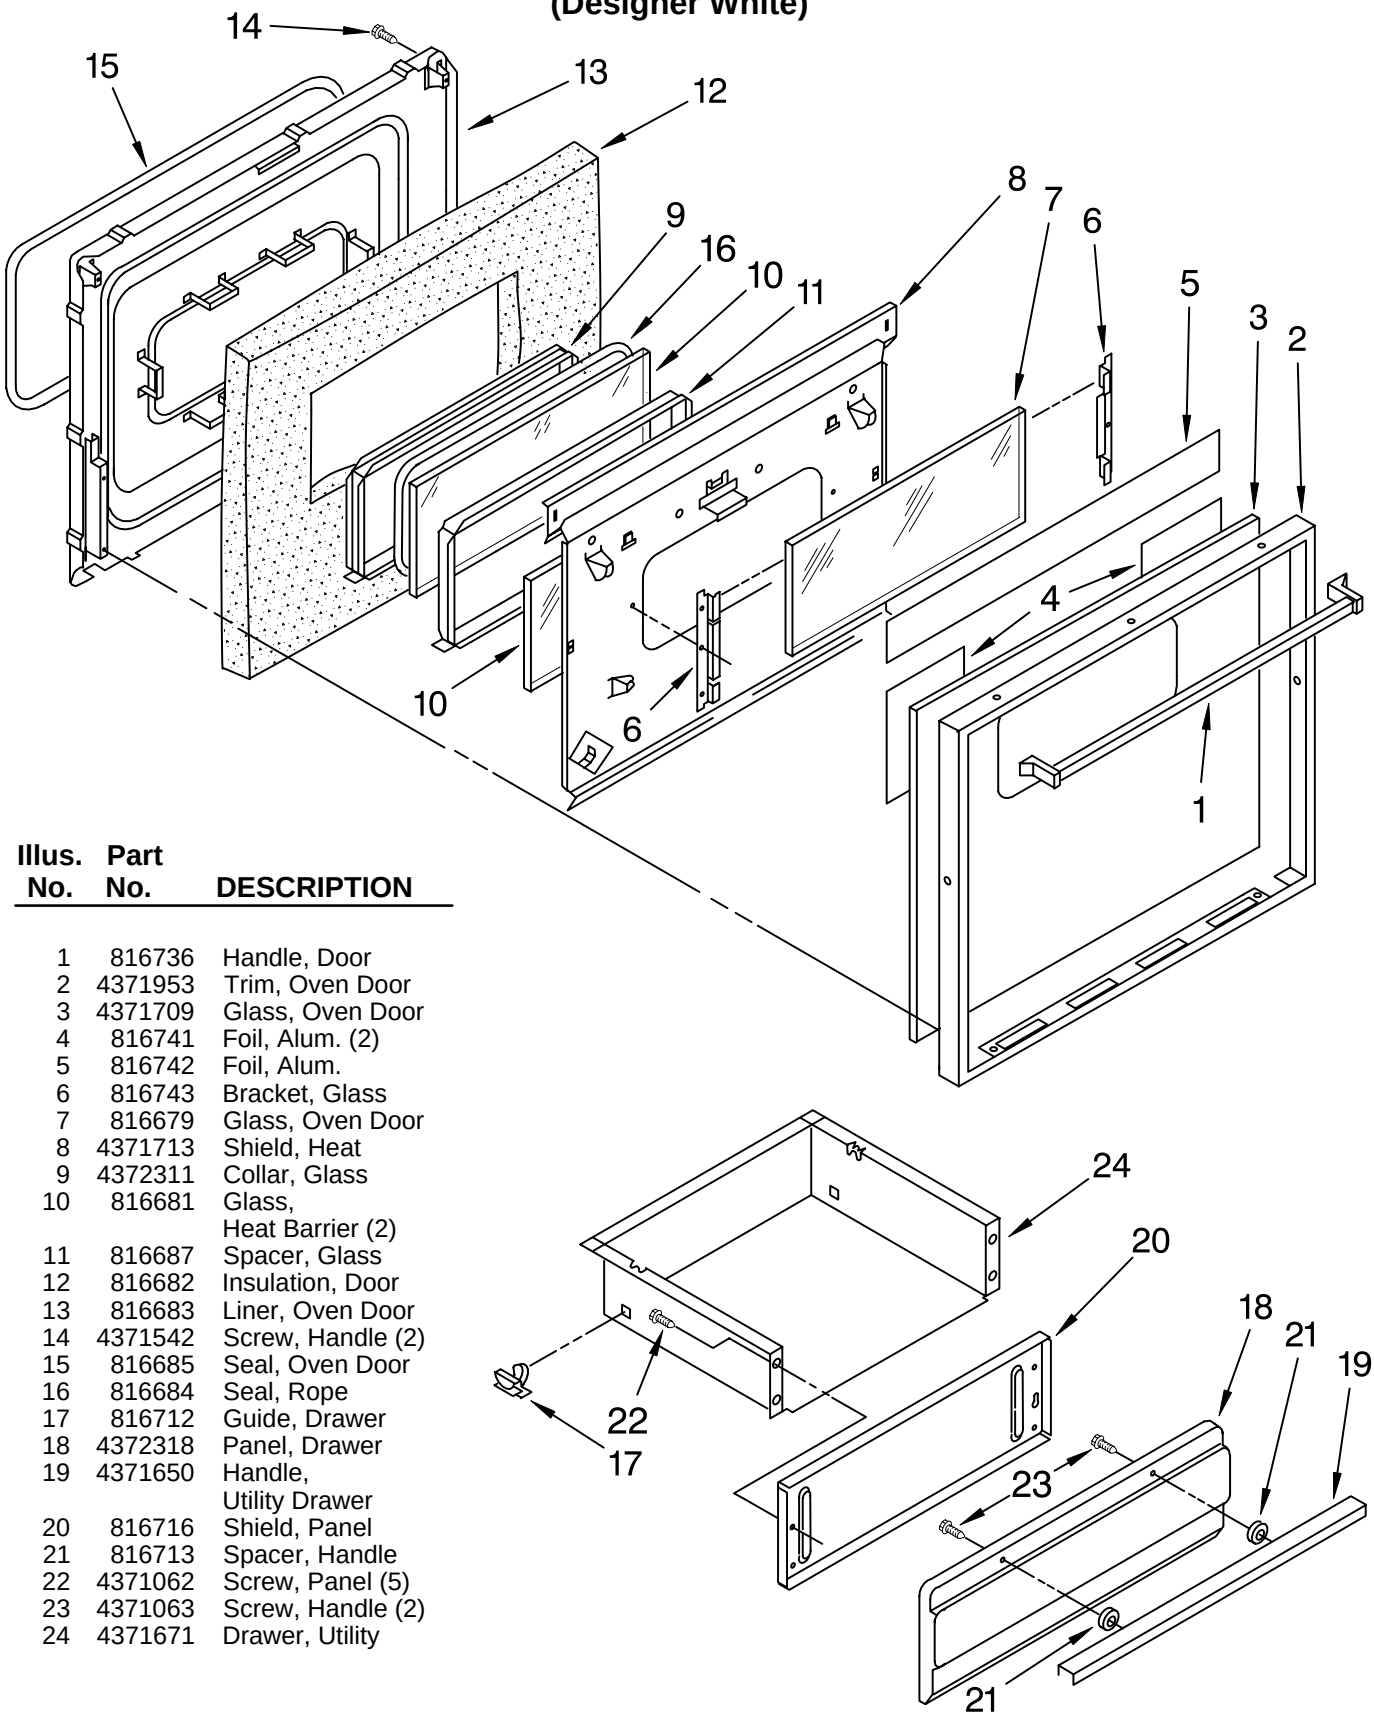

Illus. No.	Part No.	DESCRIPTION
1	816736	Handle, Door
2	4371953	Trim, Oven Door
3	4371709	Glass, Oven Door
4	816741	Foil, Alum. (2)
5	816742	Foil, Alum.
6	816743	Bracket, Glass
7	816679	Glass, Oven Door
8	4371713	Shield, Heat
9	4372311	Collar, Glass
10	816681	Glass, Heat Barrier (2)
11	816687	Spacer, Glass
12	816682	Insulation, Door
13	816683	Liner, Oven Door
14	4371542	Screw, Handle (2)
15	816685	Seal, Oven Door
16	816684	Seal, Rope
17	816712	Guide, Drawer
18	4372318	Panel, Drawer
19	4371650	Handle, Utility Drawer
20	816716	Shield, Panel
21	816713	Spacer, Handle
22	4371062	Screw, Panel (5)
23	4371063	Screw, Handle (2)
24	4371671	Drawer, Utility

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST